



Assembly Instructions




2003-A – 2008-A (Illustration shows 2004-A)

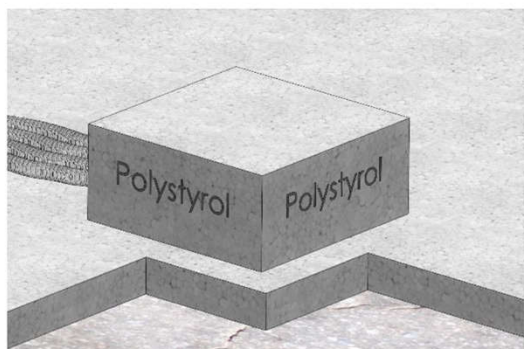


Polystyrene block each about 40mm larger in length, width and height as lid.

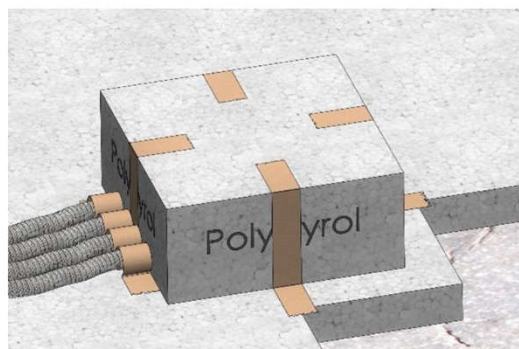

Polystyrene block for 2004-A (Example):
app. 290mm x 290mm x 130mm

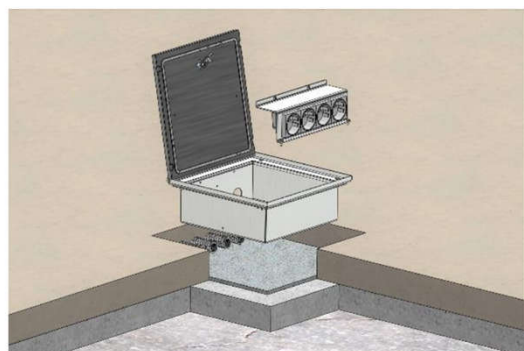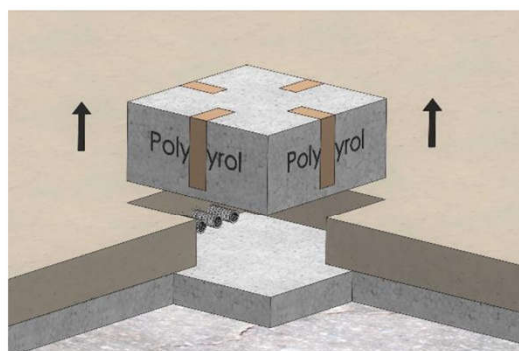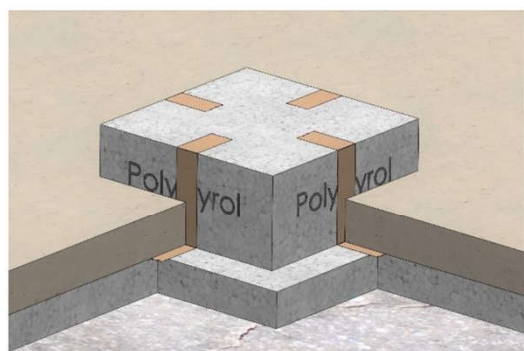

Remove gear tray and set the box into the mortar.

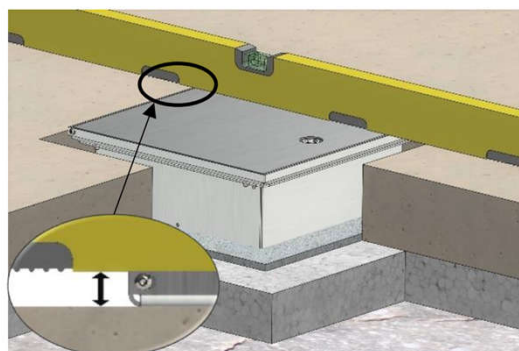


Consider covering thickness.



Assembly Instructions

2003-A – 2008-A (Illustration shows 2004-A)

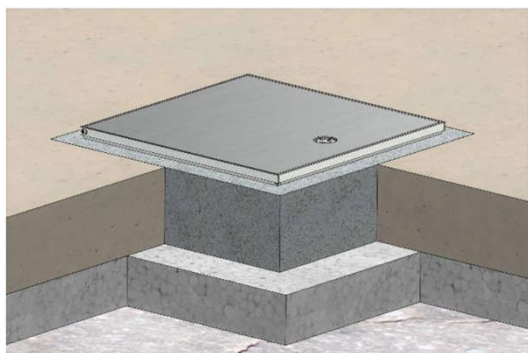

Connetc cables and fix the gear tray.

