

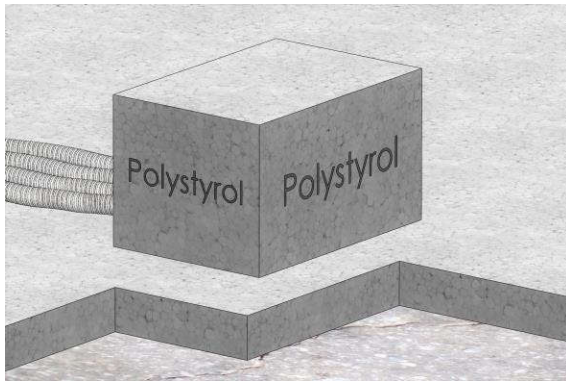
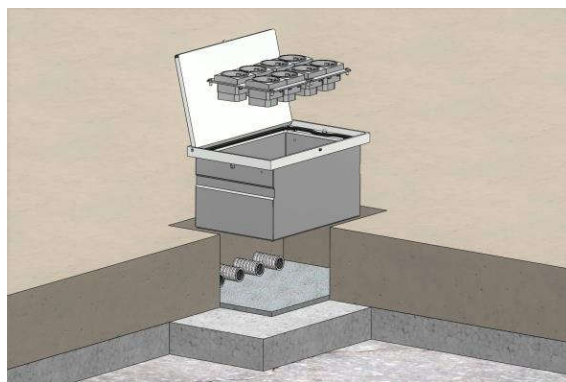
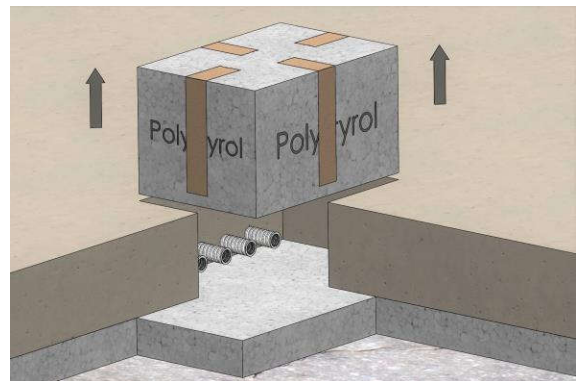


Assembly Instructions


8308-A/Anw

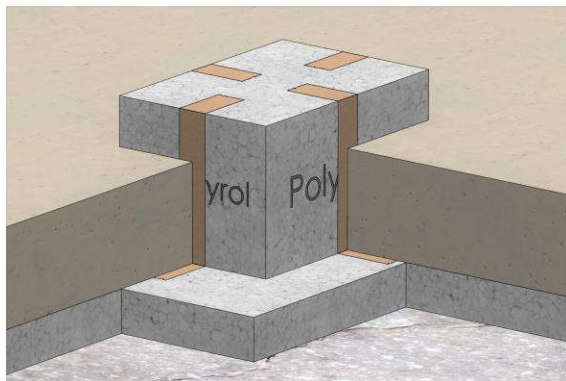

Polystyrene block 290x200x171mm

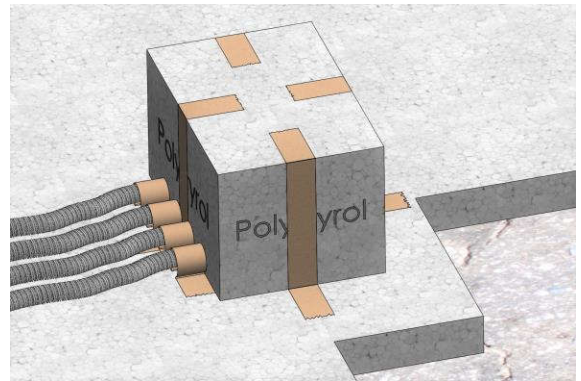



Remove the gear tray and set the box it into the mortar.

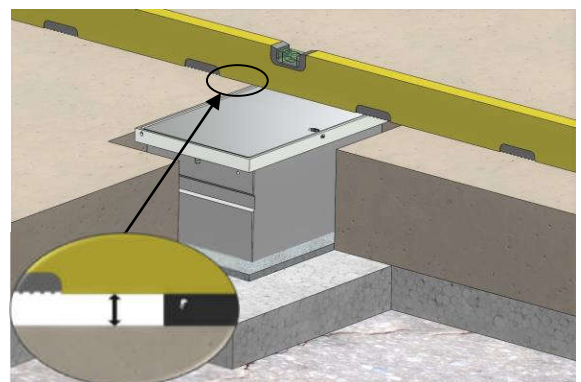

Consider covering thickness (including cover)

Assembly Instructions

8308-A/Anw

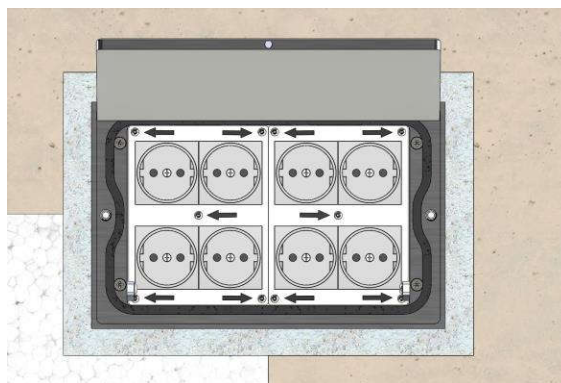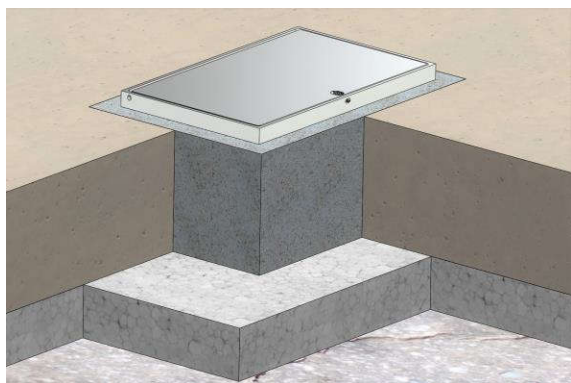

Connect the cables and fix the gear tray.

