



Assembly Instructions




8603/04-A

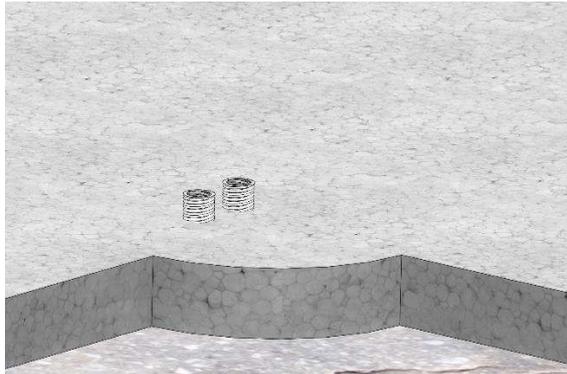


The cables are fed from below.

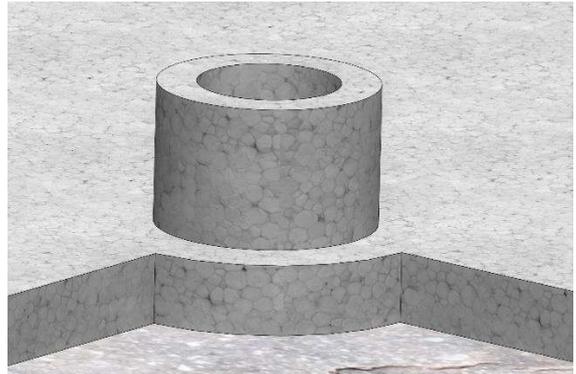


Styrofoam block
approx. diameter 151mm x high 100mm

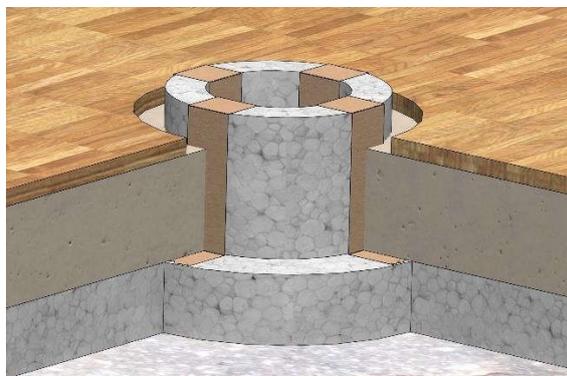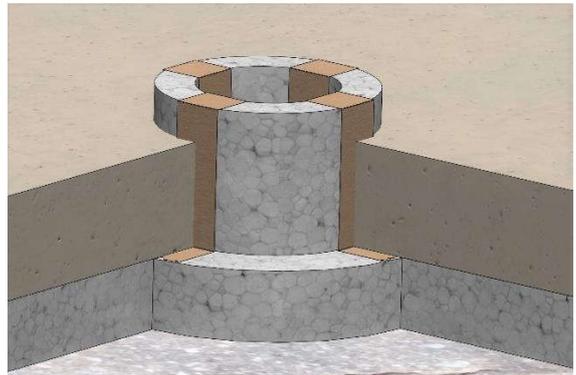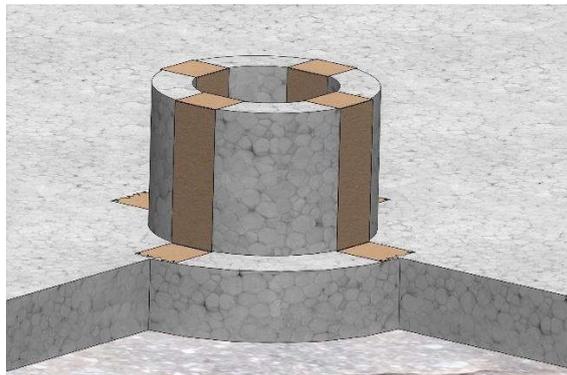



Bore hole in the covering: 201mm diameter

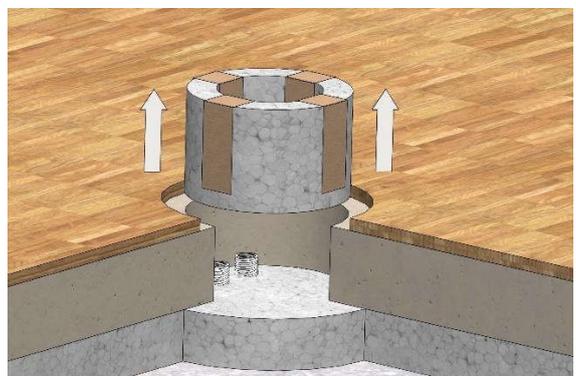


Assembly Instructions 8603/04-A

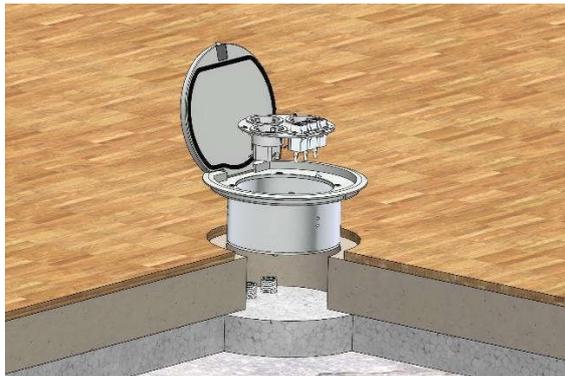

Remove gear tray from the box.

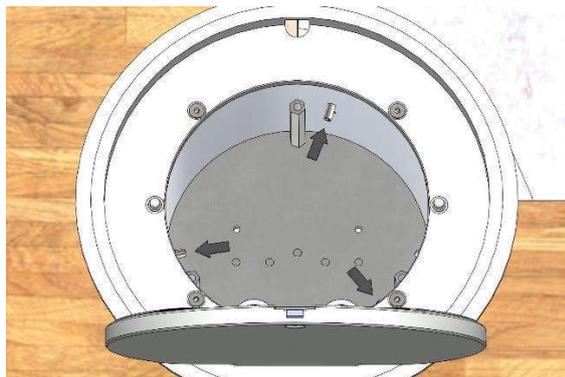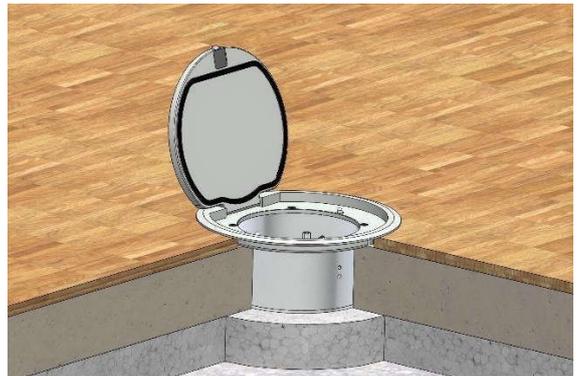

Anke box with stud bolts.

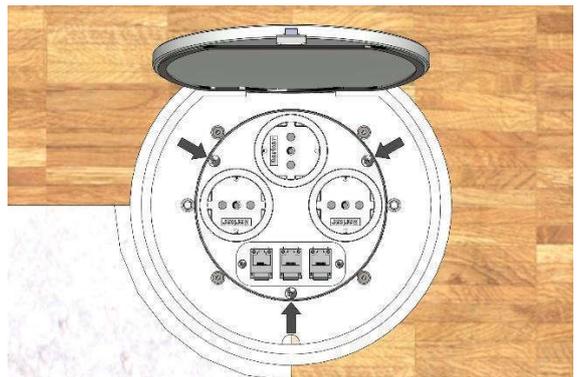

Connect the devices.
Fix the gear tray.

