

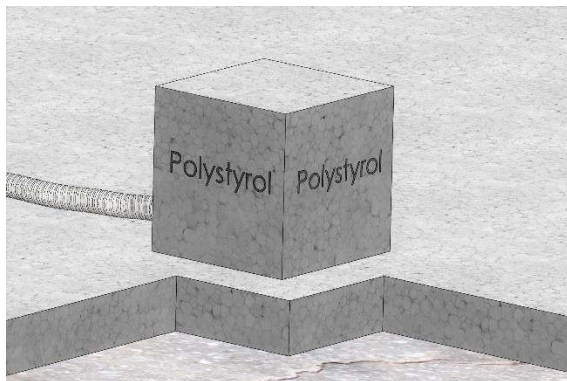
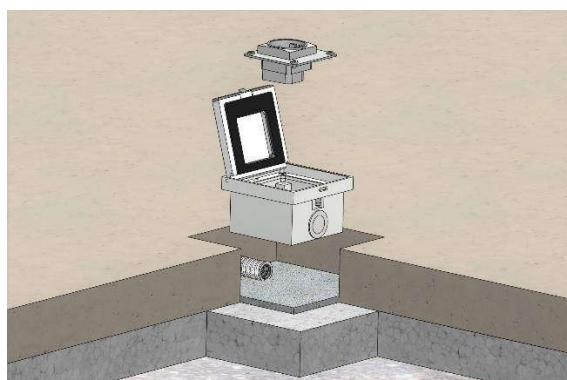
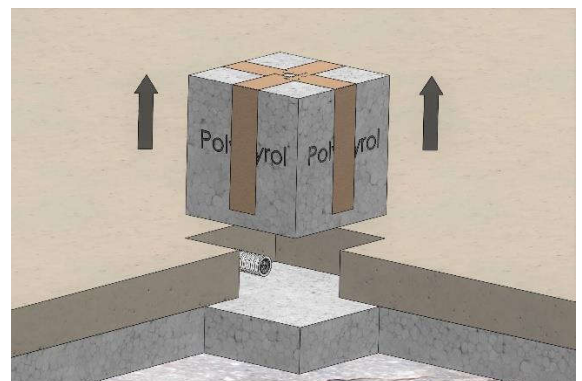


# Assembly Instructions


## 8701-A

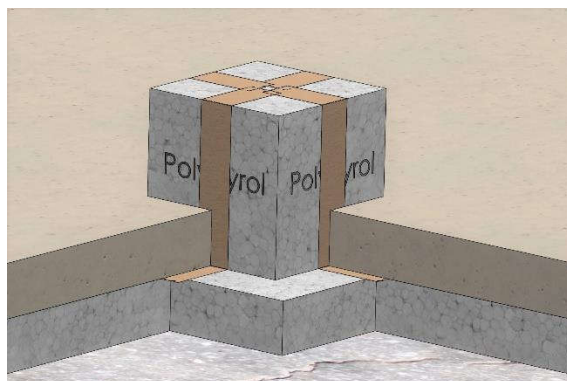

Polystyrene block 150x150x150mm

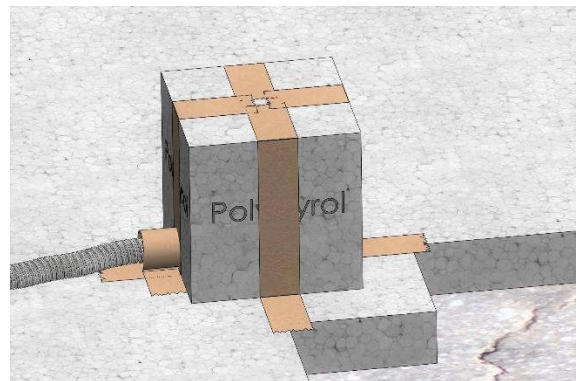



Remove the gear tray and set the box into the mortar.

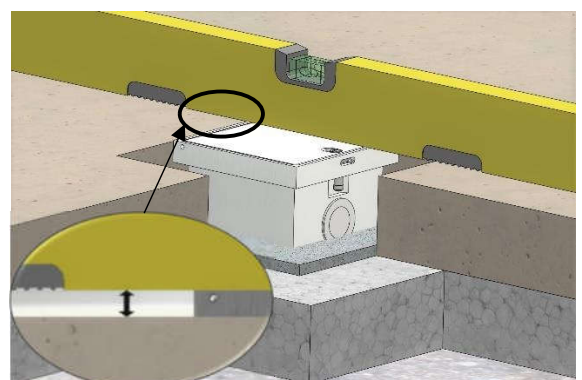

Consider covering thickness.

# Assembly Instructions

## 8701-A

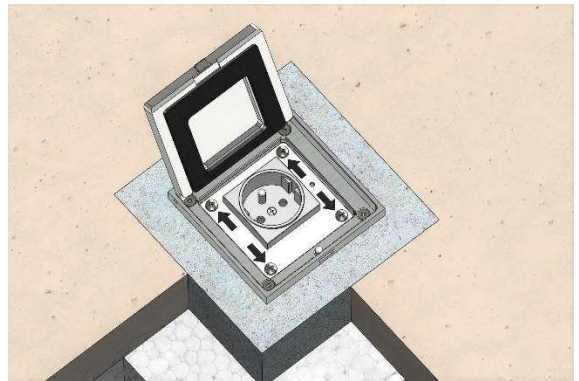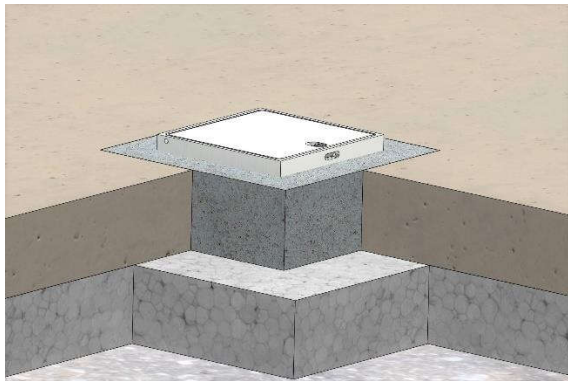

Connect the cable.  
Fix the gear tray.

